


Model No. WESY59420

Serial No. _____

Write the serial number in the space above for future reference.

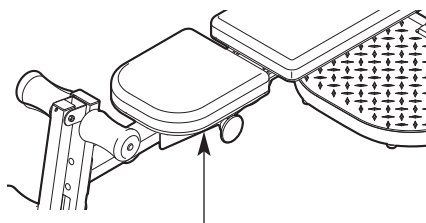

Serial Number Decal (under seat)

QUESTIONS?

As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or if there are missing or damaged parts, we will guarantee complete satisfaction through direct assistance from our factory.

TO AVOID DELAYS, PLEASE CALL DIRECT TO OUR TOLL-FREE CUSTOMER HOT LINE. The trained technicians on our customer hot line will provide immediate assistance, free of charge.

CUSTOMER HOT LINE:

1-800-999-3756


Mon.–Fri., 6 a.m.–6 p.m. MST

CAUTION

Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.

CROSS BOWTM by WEIDER[®]

USER'S MANUAL

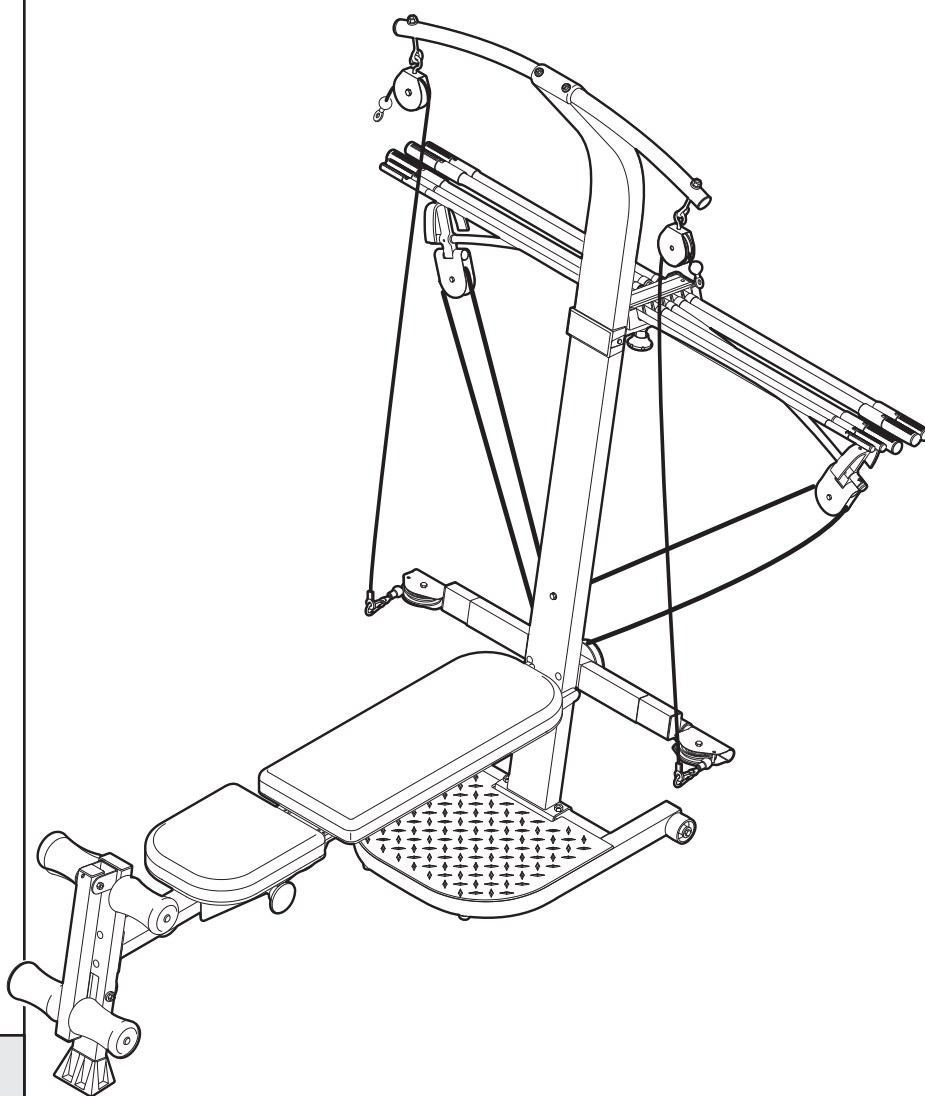

Visit our website at

www.TheCrossBow.com


TABLE OF CONTENTS

WARNING DECAL PLACEMENT	2
IMPORTANT PRECAUTIONS	3
BEFORE YOU BEGIN	4
ASSEMBLY	5
ADJUSTMENTS	13
CABLE DIAGRAM	16
EXERCISE GUIDELINES	17
ORDERING REPLACEMENT PARTS	Back Cover
LIMITED WARRANTY	Back Cover

Note: A PART IDENTIFICATION CHART and a PART LIST/EXPLODED DRAWING are attached in the center of this manual. Remove the PART IDENTIFICATION CHART and PART LIST/EXPLODED DRAWING before beginning assembly.

WARNING DECAL PLACEMENT

The decals shown here have been placed on the resistance system. If a decal is missing or illegible, please call our Customer Service Department toll-free at 1-800-999-3756, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time, to order a free replacement decal. Apply the decal in the location shown.

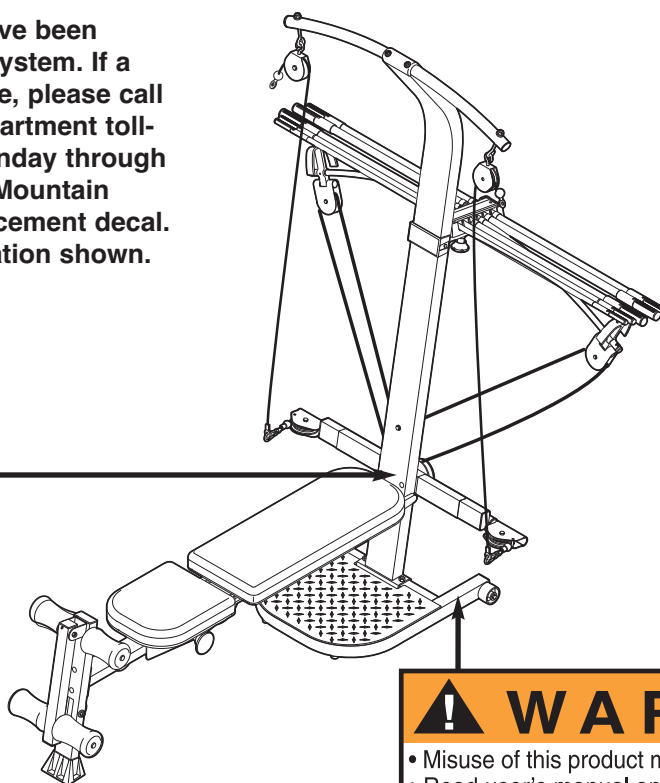

IMPORTANT PRECAUTIONS

⚠ WARNING: To reduce the risk of serious injury, read the following important precautions before using the resistance system.

1. Read all instructions in this manual before using the resistance system. Use the resistance system only as described in this manual.
2. It is the responsibility of the owner to ensure that all users of the resistance system are adequately informed of all precautions.
3. The resistance system is intended for home use only. Do not use the resistance system in any commercial, rental, or institutional setting.
4. Use the resistance system only on a level surface. Cover the floor beneath the resistance system to protect the floor.
5. Make sure that all parts are properly tightened each time you use the resistance system. Replace any worn parts immediately.
6. Keep children under 12 and pets away from the resistance system at all times.
7. Keep hands and feet away from moving parts.
8. Always wear athletic shoes for foot protection while exercising.
9. The lat tower crossbar is not designed to be used for pull-up exercises. Do not hang on the crossbar.
10. The resistance system is designed to support a maximum user weight of 300 pounds.
11. Pull on the low pulley cable only while sitting on the bench or standing on the base plate. Pull on the high pulley cables only while sitting on the bench, with the seat in one of the three positions closest to the upright base, or while standing on the base plate.
12. The resistance system is designed to be used with the included resistance, and the resistance included with a CrossBow by WELDER™ Power Pak. Do not use the resistance system with any other type of resistance.
13. When adding resistance, both ends of the crossbows must rest under the two “U”-channels. Add and remove crossbows from the “U”-channels one crossbow at a time.
14. Keep clear of the area around the “U”-channels while the resistance system is in use. Do not add or remove crossbows from the “U”-channels while the end of the long cable is pulled out.
15. Always adjust the crossbow assembly to the horizontal position and make sure the fulcrum knob is secure before using the resistance system.
16. Make sure the rings on the crossbows are pushed against the crossbow spacer before using the resistance system.
17. If you purchase the optional lat bar, always disconnect it from the short cables when performing an exercise that does not require it.
18. Make sure the storage knob is in place and fully tightened each time you use the resistance system.
19. Make sure that the cables remain on the pulleys at all times. If the cables bind as you are exercising, stop immediately and make sure that the cables are on the pulleys.
20. If you feel pain or dizziness while exercising, stop immediately and begin cooling down.

⚠ WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems. Read all instructions before using. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.


BEFORE YOU BEGIN

Thank you for selecting the innovative CrossBow by WEIDER™ resistance system. The resistance system offers a selection of stations designed to develop every major muscle group of the body. Whether your goal is to tone your body, build dramatic muscle size and strength, or improve your cardiovascular system, the resistance system will help you to achieve the specific results you want.

For your benefit, read this manual carefully before using the resistance system. If you have questions

after reading this manual, please call our Customer Service Department toll-free at 1-800-999-3756, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please note the product model number and serial number before calling. The model number is WESY59420. The serial number can be found on a decal attached to the resistance system (see the front cover of this manual).

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled.

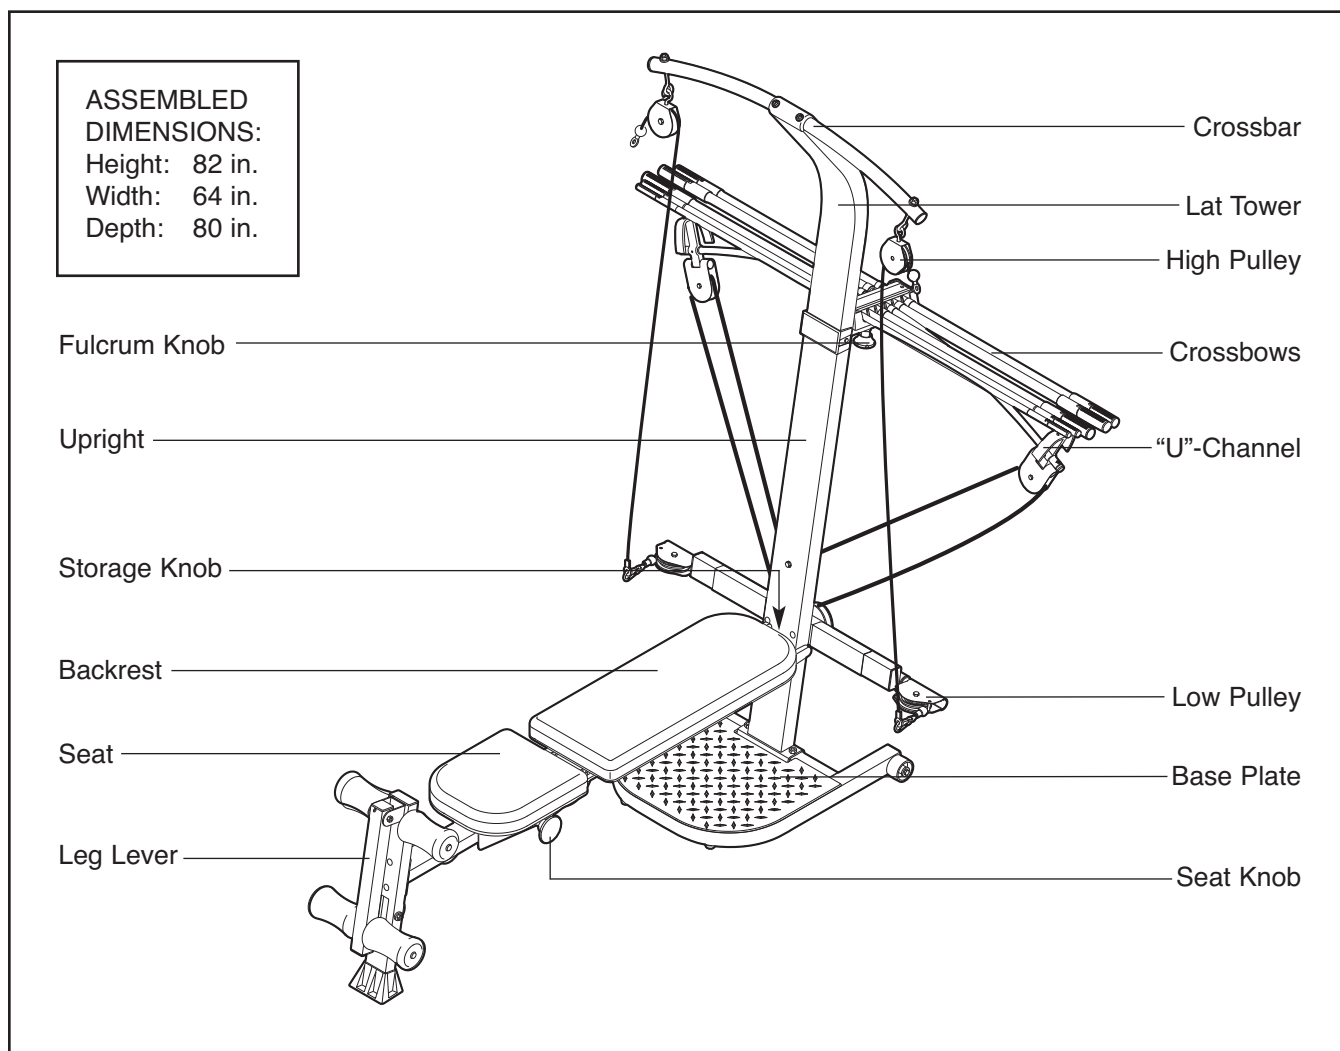

ASSEMBLY

Make Things Easier for Yourself

This manual is designed to ensure that the resistance system can be assembled successfully by most people. However, it is important to realize that the versatile resistance system has many parts and that the assembly process will take time. Most people find that by setting aside plenty of time, assembly will go smoothly.


Before beginning assembly, carefully read the following information and instructions:

- Assembly requires two persons.
- Place all parts in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed.
- **For help identifying small parts, use the PART IDENTIFICATION CHART.** Note: Some small parts may have been pre-attached for shipping. If a part is not in the parts bag, check to see if it has been pre-attached.

- Tighten all parts as you assemble them, unless instructed to do otherwise.
- As you assemble the resistance system, make sure all parts are oriented as shown in the drawings.

The included Allen wrenches and the following tools (not included) are required for assembly:

- Two adjustable wrenches
- One rubber mallet
- One standard screwdriver
- One Phillips screwdriver
- Lubricant, such as grease or petroleum jelly, and soapy water.

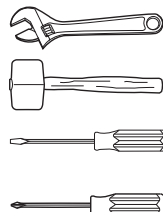


Assembly will be more convenient if you have a socket set, a set of open-end or closed-end wrenches, or a set of ratchet wrenches.

1. **Before beginning assembly, make sure that you have read and understand the information in the box above.**

Press two 2" Square Inner Caps (98) into the Base (1).


Attach two Plastic Feet (53) and two Large Plastic Feet (102) to the Base (1) with four #8 x 3/4" Tek Screws (62).

Attach the Upright (3) to the Base (1) with two 3/8" x 2 3/4" Carriage Bolts (83), two 3/8" x 2 3/4" Button Head Bolts (64), and four 3/8" Nylon Locknuts (76) as shown. **Note: This step will be easier to complete if the Upright and Base are tipped on their sides.**

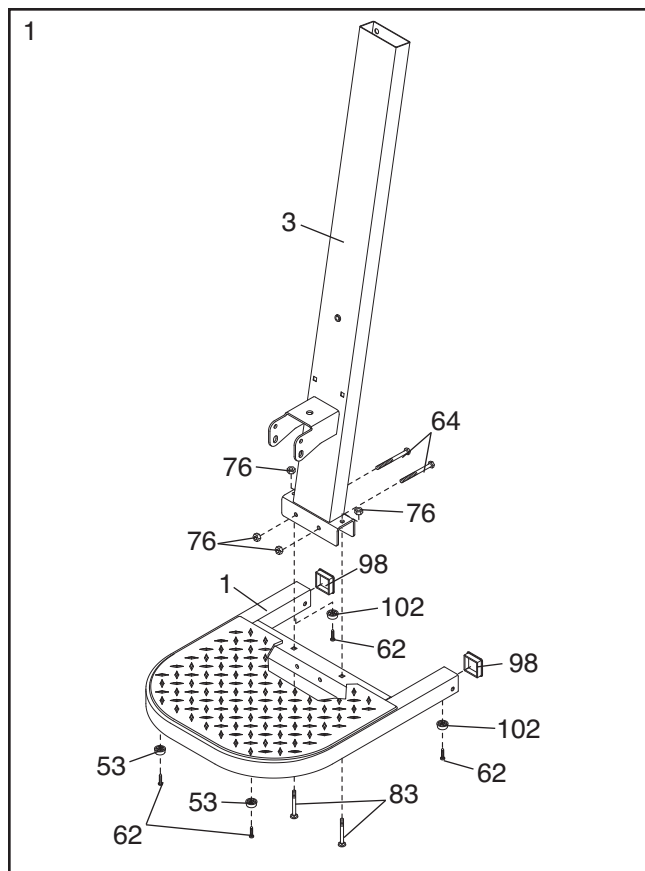


2. Attach a Wheel (31) to the outside of the Base (1) with a 3/8" x 4 1/4" Bolt (81), three 3/8" Washers (75), and a 3/8" Nylon Jamnut (103). **Do not overtighten the Nylon Jamnut; the Wheel must be able to turn easily.**

Attach the other Wheel (not shown) in the same manner.

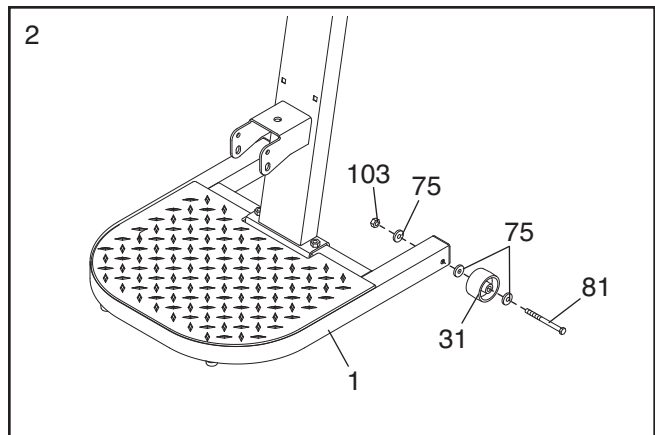

3. Press a 1 1/2" x 2 1/2" Inner Cap (41) into each end of the Cross Tube (11).


Orient the Cross Tube (11) as shown, with the welded tubes at the bottom. Attach the Cross Tube to the Upright (3) with two 3/8" x 5 1/2" Carriage Bolts (73), two 3/8" Washers (75), and two 3/8" Jamnuts (57).

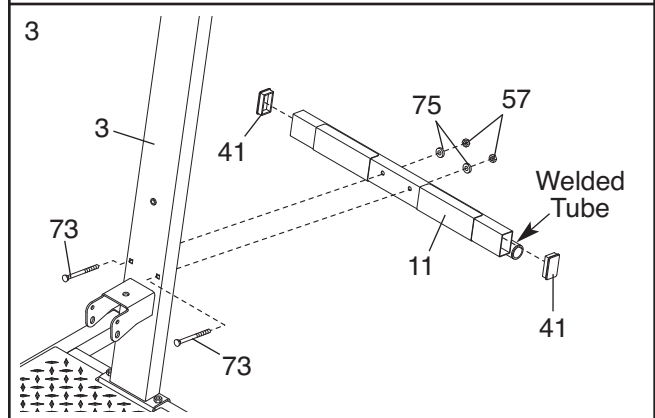

4. Press a 1 1/2" x 3" Inner Cap (99) into the top of the Front Leg (6). Press the Front Leg Foot (27) onto the bottom of the Front Leg. **Note that the front of the Front Leg Foot is taller than the back.**


Press a 1 1/2" x 3" Inner Cap (99) into the end of the Bench Rail (5).

Attach the Bench Rail (5), with the hook on the bottom, to the Front Leg (6) with two 3/8" x 2" Carriage Bolts (61) and two 3/8" Nylon Jamnuts (103).

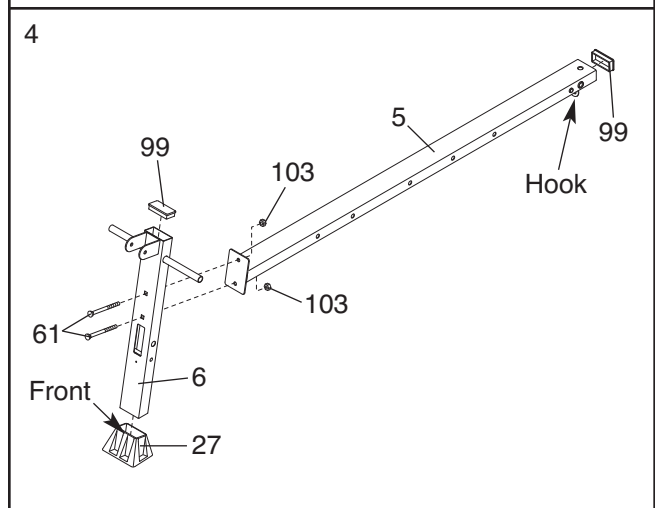


5. Lubricate a 3/8" x 4" Bolt (66) with grease. Attach the Bench Rail (5) to the Upright (3) with the Bolt and a 3/8" Nylon Jamnut (103). **Do not overtighten the Nylon Jamnut; the Bench Rail must be able to pivot easily.**

Tighten the Storage Knob (30) into the Upright (3) and the Bench Rail (5).

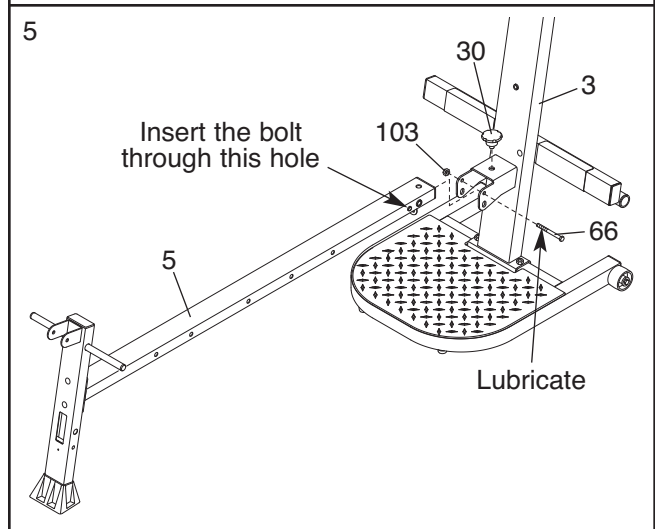

6. Have a second person hold the Lat Tower (4) so that the holes in the back line up with the holes in the Upright (3). Attach the Lat Tower to the Upright with four 3/8" x 1" Button Head Bolts (87).


Attach the Name Plate (89) to the Lat Tower (4) with two #8 x 1/2" Tek Screws (56).

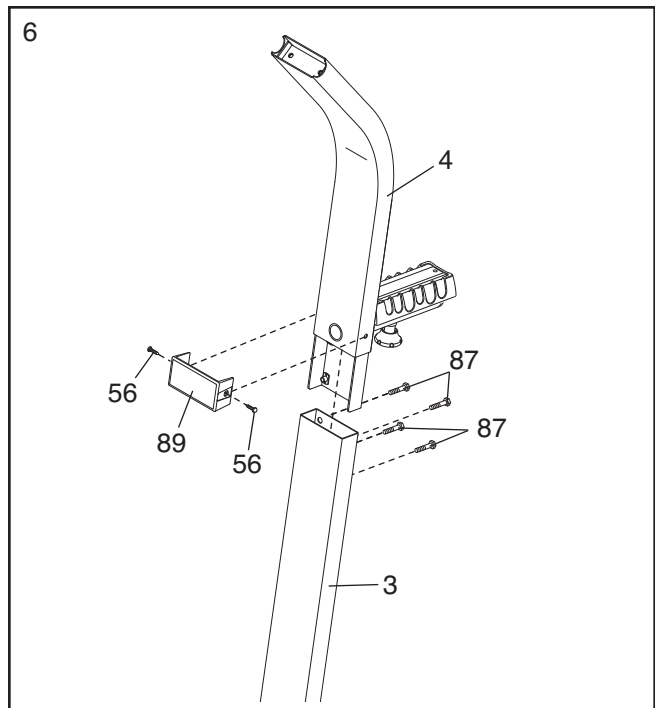

7. Press a 1 1/2" Round Inner Cap (38) into each end of the Lat Tower Crossbar (10).

Attach two Eyebolts (34) to the Lat Tower Crossbar (10) with two 5/16" Washers (59) and two 5/16" Nylon Jamnuts (65). **Do not overtighten the Jamnuts; the Eyebolts must be able to rotate freely.**


Attach the Lat Tower Crossbar (10) to the Lat Tower (4) with two 3/8" x 3" Button Head Bolts (70), two 3/8" Washers (75), and the Crossbar Cover (93). **Be sure that the Eyebolts (34) are oriented as shown in the inset drawing. If they are not, turn the Lat Tower Crossbar around and reattach it.**

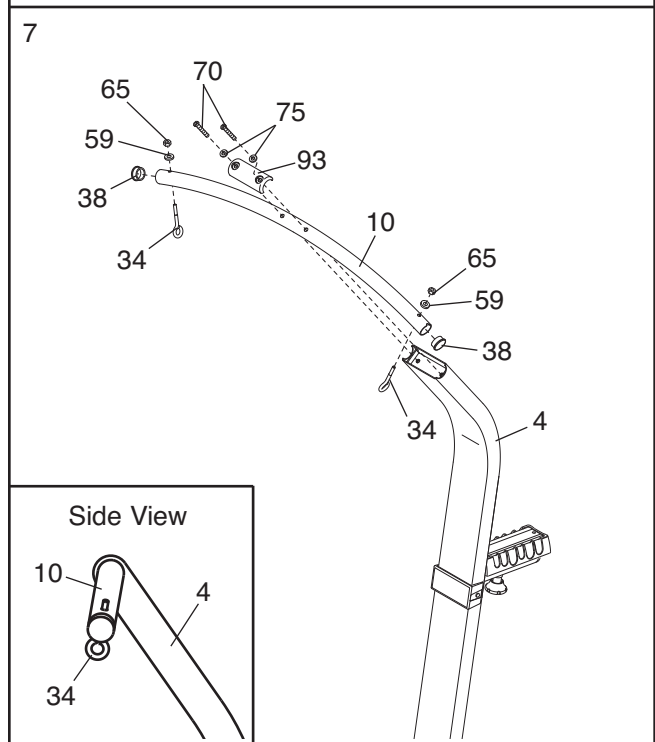

8. Attach the Leg Lever Bumper (55) to the Front Leg (6) with a #8 x 3/4" Tek Screw (62).

Press two 1 3/4" Square Inner Caps (42) into the Leg Lever (7).

Lubricate a 3/8" x 2 3/4" Button Head Bolt (64) with grease. Orient the Leg Lever (7) with the slot on the side shown. Attach the Leg Lever to the Front Leg (6) with the Bolt and a 3/8" Nylon Locknut (76). **Do not overtighten the Nylon Locknut; the Leg Lever must be able to pivot easily.**

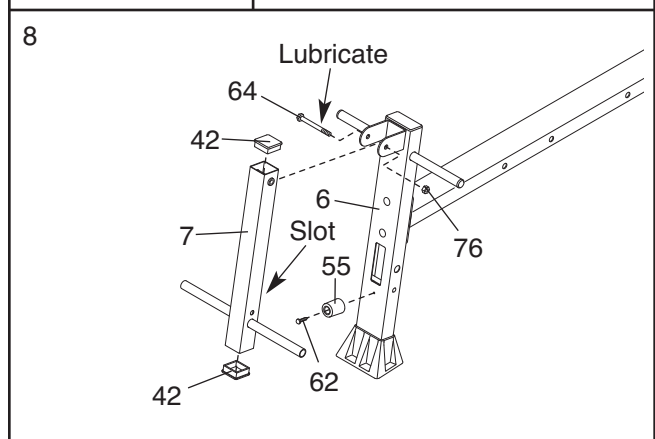

9. Attach two .34" Metal Spacers (97), a 2.3" Metal Spacer (39), and two Bearing Wheels (46) to one end of the Seat Carriage (12) with a 5/16" x 4" Bolt (60) and a 5/16" Nylon Jamnut (65) as shown. **Make sure the parts are oriented as shown in the inset drawing; the Seat Knob (not shown) will not engage the Bench Rail (not shown) if they are incorrectly oriented. Do not overtighten the Jamnut; the Bearing Wheels must be able to roll easily.**

Attach two Bearing Wheels (not shown) to the other end of the Seat Carriage (12) in the same manner.

10. Attach the Seat Knob (45) to the Seat Carriage (12) with two #8-32 x 1/2" Machine Screws (92) and two #8-32 Nylon Locknuts (69). **Be sure that the slot in the Knob is aligned with the slot in the Seat Carriage, as shown.**


Orient the Seat (13), the Seat Backing (9), and the Seat Carriage (12) as shown. Attach the Seat and the Seat Backing to the Seat Carriage with four 1/4" x 3/4" Bolts (82).

11. Pull out the Seat Knob (45) as far as it will go, and set the Seat Carriage (12) on the Bench Rail (5).

Loosely attach two .34" Metal Spacers (97), a 2.3" Metal Spacer (39), and two Bearing Wheels (46) to the center holes in the Seat Carriage (12) with two 5/16" Hex Serrated Flange Nuts (19) and the 5/16" x 4.69" All-thread Bolt (47). **Make sure the parts are oriented as shown in the inset drawing. Make sure that the serrated edge of the Flange Nuts are against the Seat Carriage and that three threads are extending past the Nut.**

While a second person presses down on the Seat (13), hold wheel assembly firmly against the bottom of the Bench Rail (5) and properly tighten the 5/16" Hex Serrated Flange Nuts (19). **Make sure that the wide sides of all six Wheels (46) are pressed against the Bench Rail. Do not overtighten the Nuts; the Bearing Wheels must be able to roll easily.**

Engage the Seat Knob (45) into an adjustment hole in the Bench Rail (5).

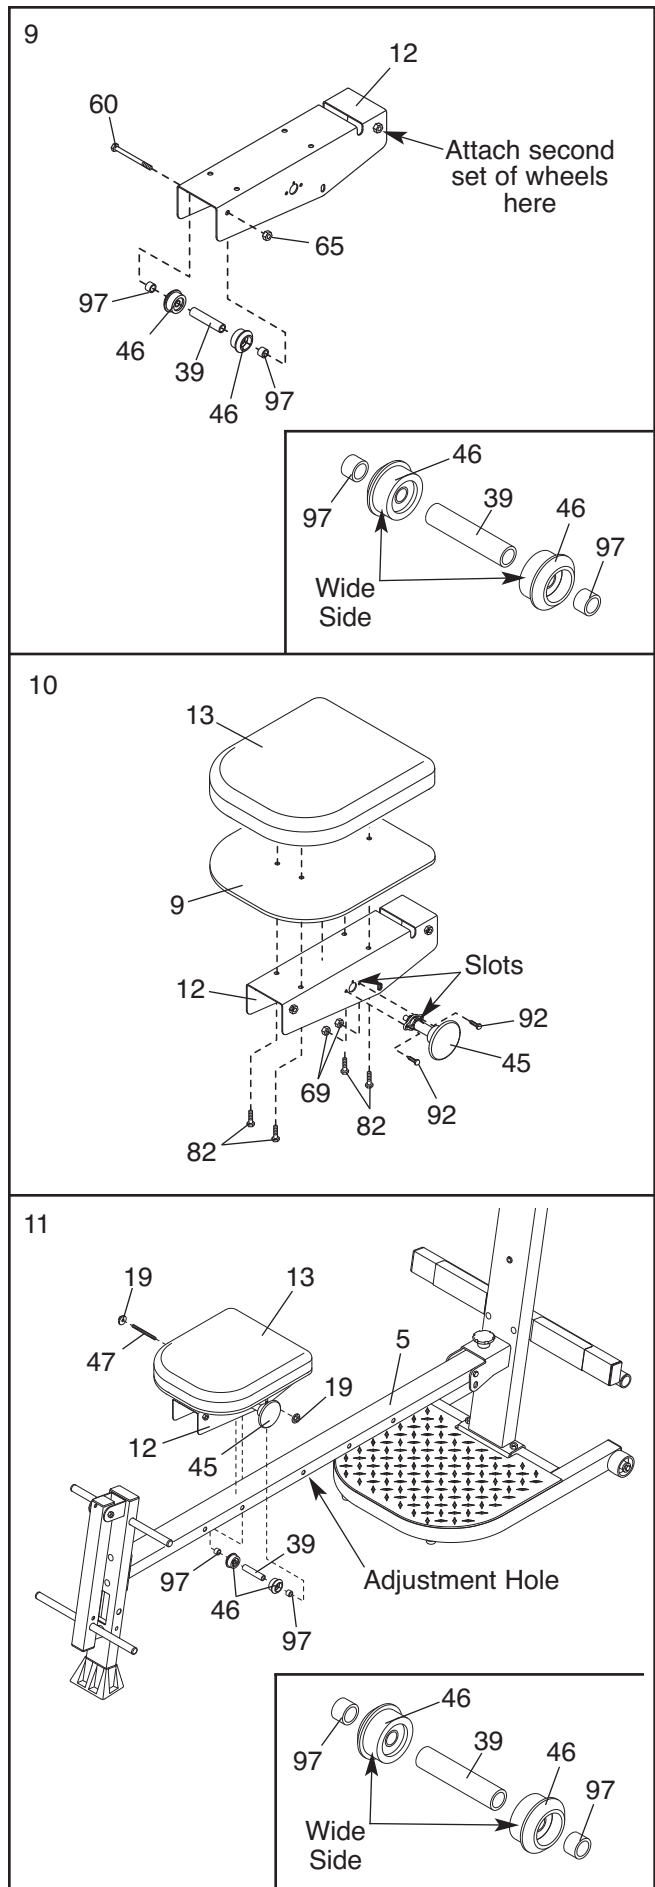

12. Press two 1" Square Inner Caps (54) into the indicated end of the Backrest Frame (15).

Attach a Plastic Foot (53) to the Backrest Frame (15) with a #8 x 3/4" Tek Screw (62).


Attach the two Guard Plates (17) to the inside of the Backrest Frame (15) with four #8 x 1/2" Tek Screws (56).

13. Orient the Backrest (14) and the Backrest Backing (8) as shown. Attach the Backrest and the Backrest Backing to the Backrest Frame (15) with four 1/4" x 1 3/4" Bolts (58).

14. Insert the rod on the Backrest Frame (15) into the slot in the Seat Carriage (12). **Hold the Backrest Frame vertically over the Seat Carriage and slide the rod into the slot, as shown in the inset drawing.**

15. Attach the two 10-Pound Short Crossbow Caps (20) to the 10-Pound Center Crossbow (44) with two #8 x 1/2" Flat Head Screws (85).

Attach the two 10-Pound Crossbow Caps (101) to the 10-Pound Removable Crossbow (67), the two 20-Pound Crossbow Caps (88) to the 20-Pound Removable Crossbow (36), the four 80-Pound Crossbow Caps (100) to the two 80-Pound Crossbows (95), and the two 40-Pound Crossbow Caps (79) to the 40-Pound Crossbow (96) with ten #8 x 1/2" Flat Head Screws (85).

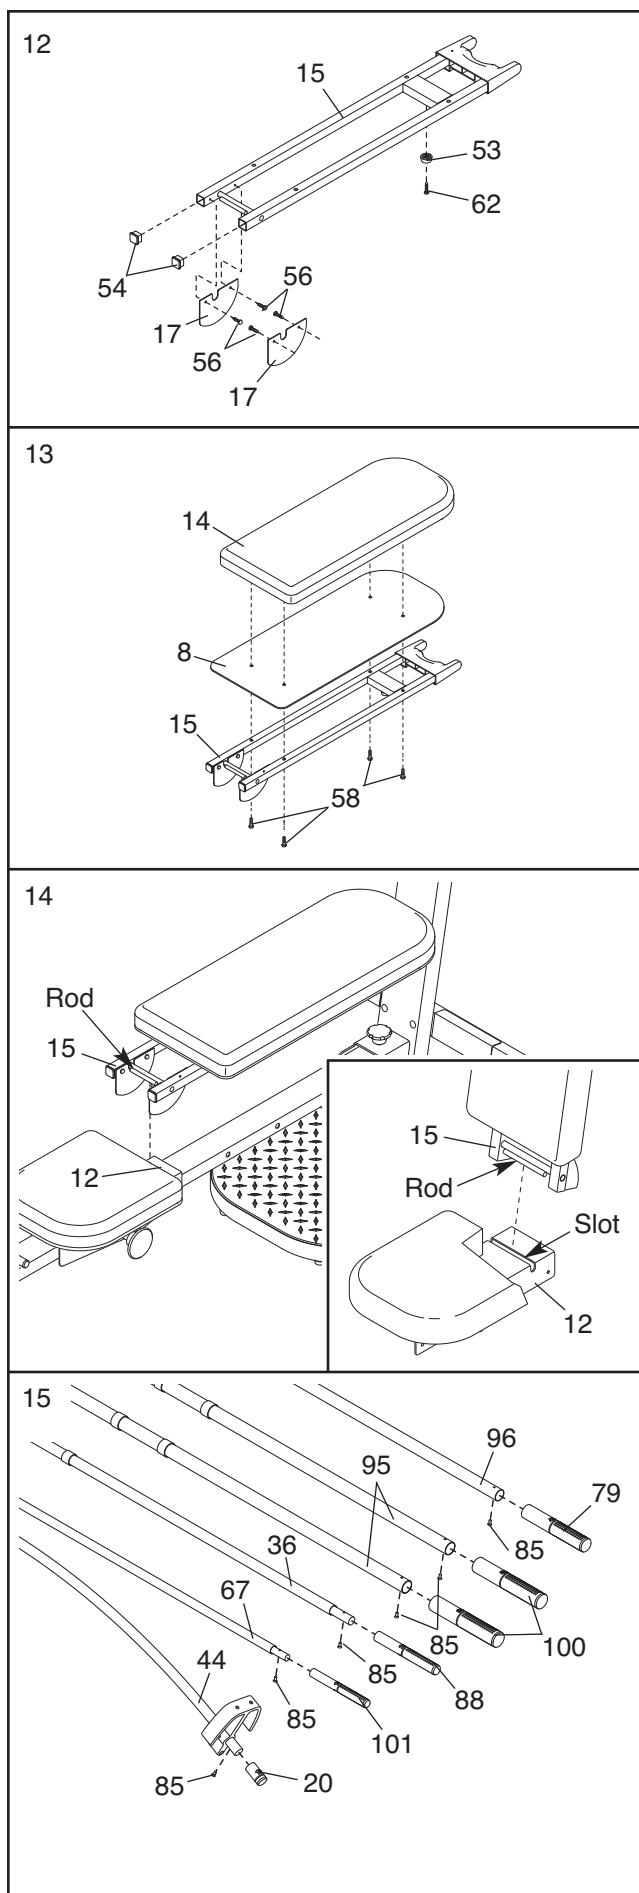

16. Locate the Crossbow Spacer (35) on the Lat Tower (4) (see the inset drawing). Remove the two preassembled 5/16" x 3/4" Button Head Screws (86) and the Crossbow Cover Plate (72) from the Crossbow Spacer.

Set the Crossbows into the Crossbow Spacer (35) in the following order: the 10-Pound Removable Crossbow (67), the 20-Pound Removable Crossbow (36), an 80-Pound Crossbow (95), the 10-Pound Center Crossbow (44), an 80-Pound Crossbow (95), and the 40-Pound Crossbow (96). **Make sure the indicated rings are on the side shown and the arrows point toward the Spacer.**

Reattach the Crossbow Cover Plate (72), with the edges up, to the Crossbow Spacer (35) with two 5/16" x 3/4" Button Head Screws (86).

17. **Locate the Long Cable (80).** Insert one end of the Cable through the welded tube on the indicated end of the Cross Tube (11) and then through a Swivel Arm (22). If necessary, use the tip of a screwdriver to pull the end of the Cable out of the Swivel Arm. **Be sure the Cable is on the indicated side of the welded rod in the Swivel Arm.**


Insert the Swivel Arm (22) into the welded tube on the Cross Tube (11). Secure the Swivel Arm with a #8 x 3/8" Screw (24).

Wrap the Long Cable (80) around a 90mm Pulley (28). Attach the Pulley inside of the Swivel Arm (22) with a 3/8" x 1 1/2" Button Head Bolt (71) and a 3/8" Nylon Jamnut (103).


18. Wrap the Long Cable (80) around a 90mm Pulley (28). Attach the Pulley and a Pulley Guard (29) to the indicated 3/8" x 5 1/2" Carriage Bolt (73) with a 3/8" Nylon Locknut (76). **Be sure the flat edge of the Pulley Guard is on the side shown.**

19. Attach a Pulley Housing (94) to the indicated "U"-channel on the 10-Pound Center Crossbow (44) with a 3/8" x 4" Bolt (66) and a 3/8" Nylon Locknut (76).

Wrap the Long Cable (80) around a 90mm Pulley (28). Attach the Pulley inside of the Pulley Housing (94) with a 3/8" x 1 1/2" Button Head Bolt (71) and a 3/8" Nylon Jamnut (103).

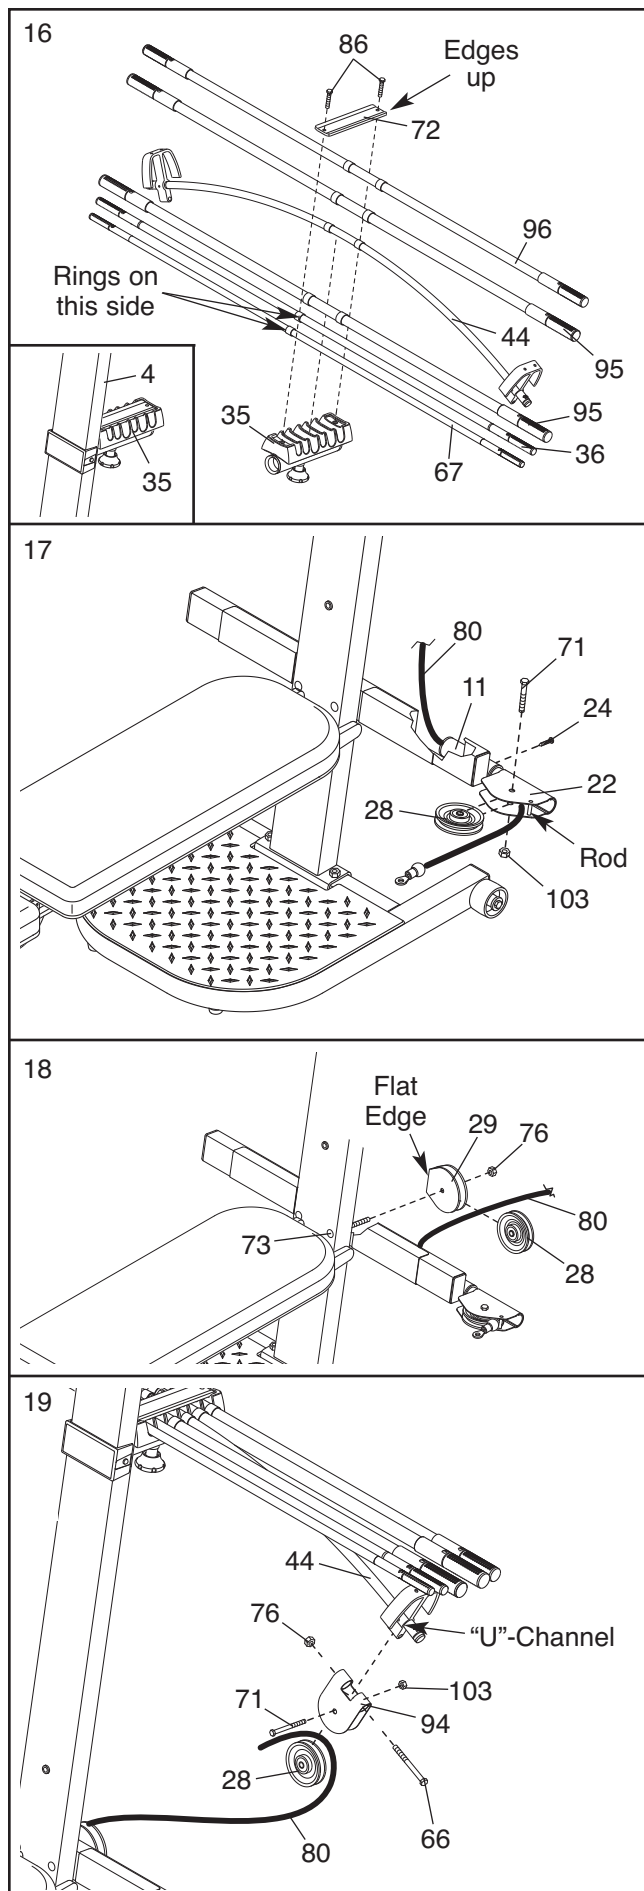


20. Wrap the Long Cable (80) under a 90mm Pulley (28) as shown. Attach the Pulley and a Pulley Guard (29) to the Upright (3) with a 3/8" x 4 1/2" Button Head Bolt (40) and a 3/8" Nylon Locknut (76). **Be sure the flat edge of the Pulley Guard is on the bottom.**

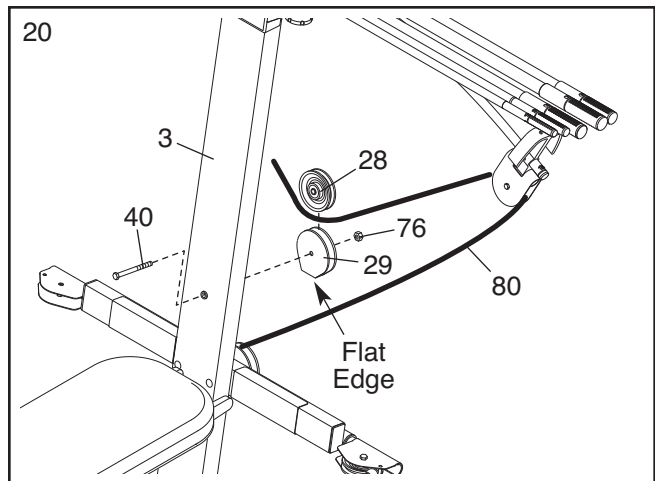


21. Attach a Pulley Housing (94) to the indicated "U"-channel on the 10-Pound Center Crossbow (44) with a 3/8" x 4" Bolt (66) and a 3/8" Nylon Locknut (76).

Wrap the Long Cable (80) around a 90mm Pulley (28). Attach the Pulley inside of the Pulley Housing (94) with a 3/8" x 1 1/2" Button Head Bolt (71) and a 3/8" Nylon Jamnut (103).

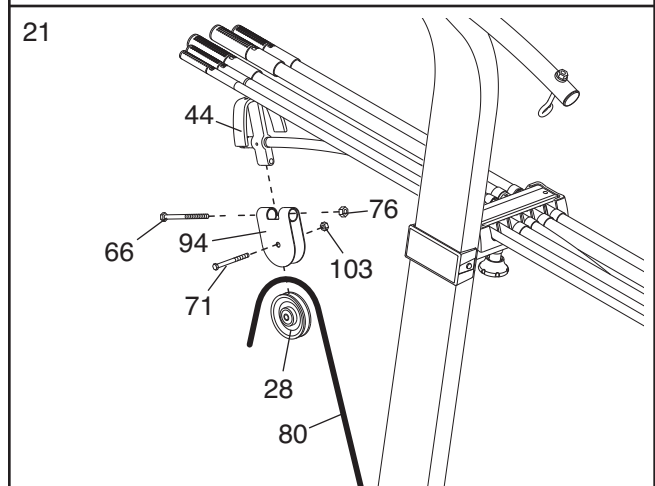

22. Wrap the Long Cable (80) around a 90mm Pulley (28). Attach the Pulley and a Pulley Guard (29) to the indicated 3/8" x 5 1/2" Carriage Bolt (73) with a 3/8" Nylon Locknut (76). **Be sure the flat edge of the Pulley Guard is on the side shown.**

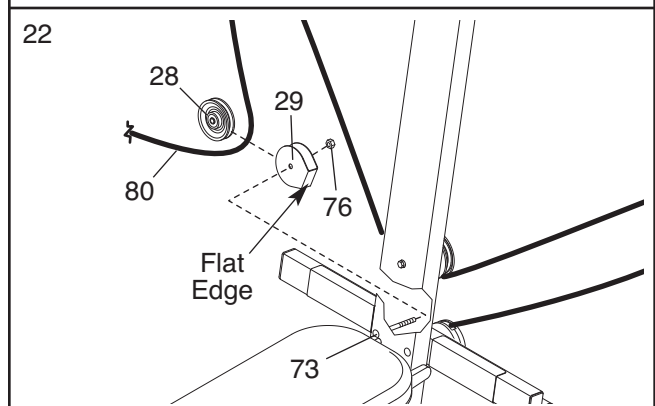


23. Make sure there are no Crossbows (not shown) under the "U"-channels on the 10-Pound Center Crossbow (not shown). Have a second person pull on the Long Cable (80) to create slack in the Cable.

Insert the end of the Long Cable (80) through the welded tube on the indicated end of the Cross Tube (11) and then through the remaining Swivel Arm (22). **Be sure the Cable is on the indicated side of the welded rod in the Swivel Arm.**


Insert the Swivel Arm (22) into the welded tube on the Cross Tube (11). Secure the Swivel Arm with a #8 x 3/8" Screw (24).

Wrap the Long Cable (80) around a 90mm Pulley (28). Attach the Pulley inside of the Swivel Arm (22) with a 3/8" x 1 1/2" Button Head Bolt (71) and a 3/8" Nylon Jamnut (103).

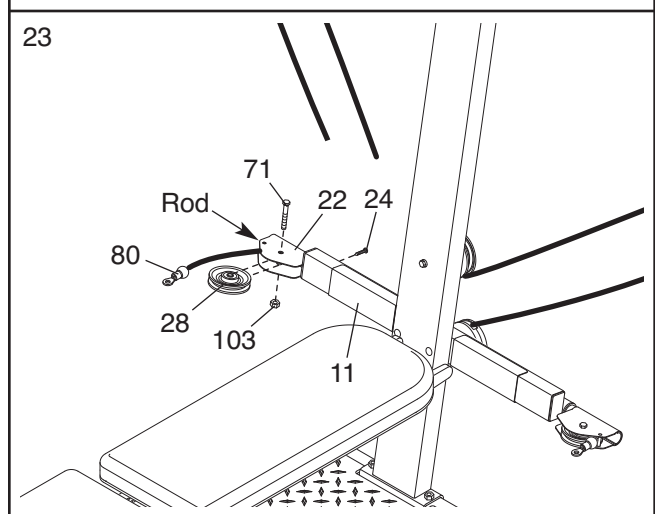


24. **Locate the Leg Lever Cable (32)**, which has two ends that are the same length and a third end that is longer.

Route the longest end of the Leg Lever Cable (32) through the hole in the Front Leg (6), and attach it inside of the hole in the Leg Lever (7) with a 3/8" x 2 1/4" Button Head Bolt (63) and a 3/8" Nylon Locknut (76).

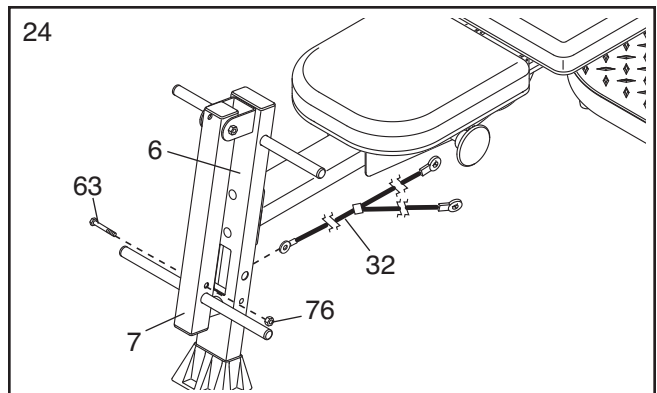


25. Attach a 90mm Pulley (28) inside of the hole in the Front Leg (6) with a 3/8" x 3 3/4" Bolt (90), two 3/8" x 1" Spacers (52), two 3/8" Washers (75), and a 3/8" Nylon Jamnut (103). **Be sure the Pulley is above the Leg Lever Cable (32).**

Slide the two free ends of the Leg Lever Cable (32) onto the hook welded to the bottom of the Bench Rail (5).

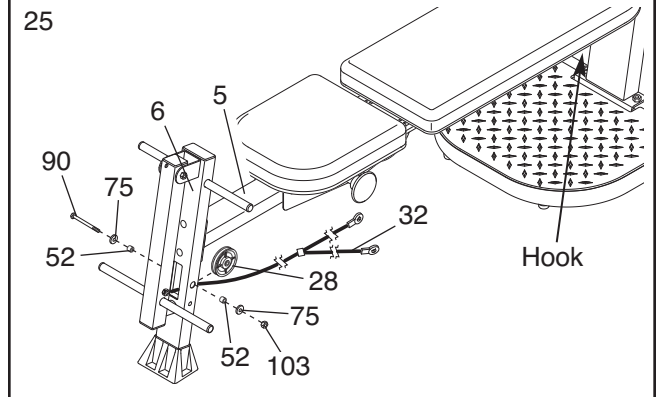


26. **Locate the two Short Cables (33).** Wrap one of the Cables around a 90mm Pulley (28). Attach the Pulley to a High Pulley Housing (21) with a 3/8" x 1 1/2" Button Head Bolt (71) and a 3/8" Nylon Jamnut (103).

Repeat this step with the other Short Cable (33).

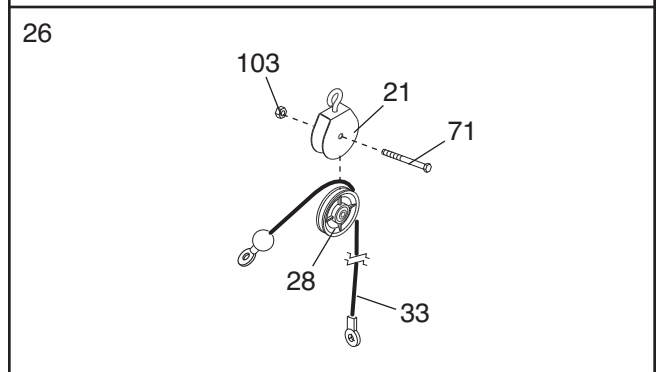

27. Slide the four Foam Pads (26) onto the tubes on the Front Leg (6) and the Leg Lever (7). Press four 1 1/4" Round Inner Caps (78) into the ends of the tubes.

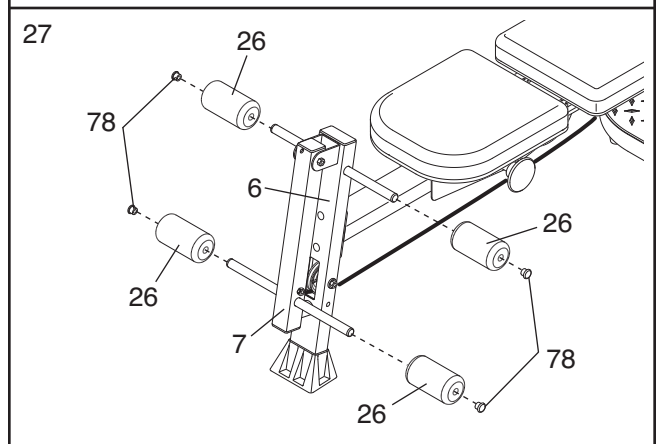

28. Make sure that all parts have been properly tightened. The use of the remaining parts will be explained in ADJUSTMENTS, beginning on the following page.

Before using the resistance system, pull the long cable a few times to be sure that it moves smoothly over the pulleys. If the cable does not move smoothly, find and correct the problem. **IMPORTANT: If the cables are not properly installed, they may be damaged when heavy resistance is used. See the CABLE DIAGRAM on page 16 for proper cable routing.**

ADJUSTMENTS

This section explains how to adjust the resistance system. See the EXERCISE GUIDELINES on page 17 for important information about how to get the most benefit from your exercise program. Also, refer to the accompanying exercise guide to see the correct form for each exercise.


Make sure all parts are properly tightened each time you use the resistance system. Replace worn parts immediately. The resistance system can be cleaned with a damp cloth and a mild, non-abrasive detergent. Do not use solvents. The crossbows can be cleaned with a vinyl and rubber protectant, available at an automotive or department store.

ATTACHING THE HIGH PULLEYS AND LEG LEVER

To use a high pulley, slide the hook on the High Pulley Housing (21) into the Eyebolt (34). Attach the end of the Short Cable (33) without the ball to the end of the Long Cable (80) with a Cable Clip (51). **Attach the other high pulley in the same manner.**

To use the Leg Lever (not shown), attach the two ends of the Leg Lever Cable (32) to the ends of the Long Cable (80) with two Cable Clips (51).


Remove the high pulleys, and detach the Leg Lever Cable (32), when not in use. Store the ends of the Leg Lever Cable on the hook under the Bench Rail (not shown).

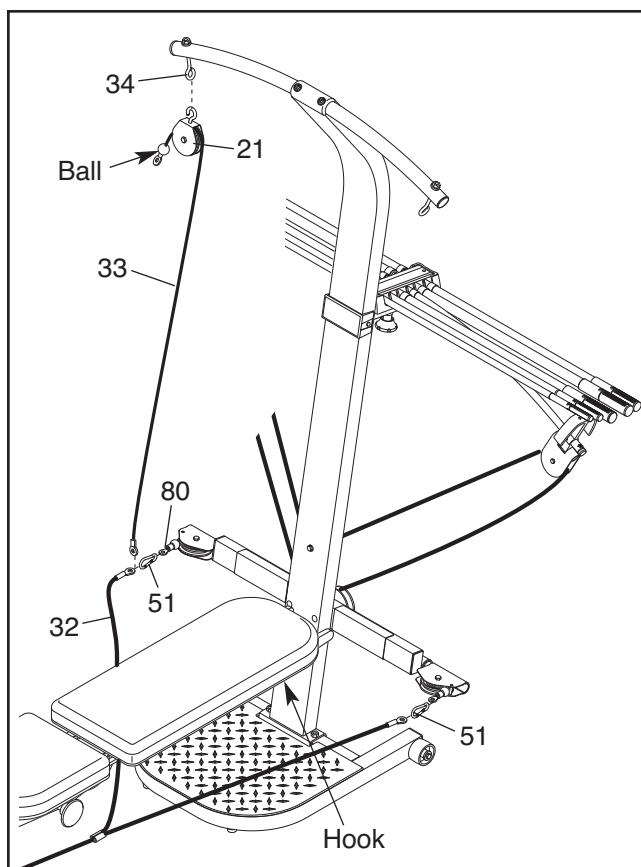

ADJUSTING THE SEAT

The Seat (13) can be secured in any of four positions on the Bench Rail (5). To move the Seat, pull the Seat Knob (45) out as far as it will go, and slide the Seat to the desired position. Engage the Seat Knob into an adjustment hole in the Bench Rail. **Note: It may be necessary to lift up on the Seat in order to engage the Seat Knob.**

To perform row exercises, the leg press strap must be attached to the long cable (see ATTACHING THE ACCESSORIES, on page 14), and the Seat Carriage (12) must be able to roll along the Bench Rail (5). First, remove the Backrest (14) from the Seat Carriage (see ADJUSTING THE BACKREST on page 15). Then, pull the Seat Knob (45) out as far as it will go, and turn the Knob so that the pin rests at the end of the "L"-shaped slot (see the inset drawing).

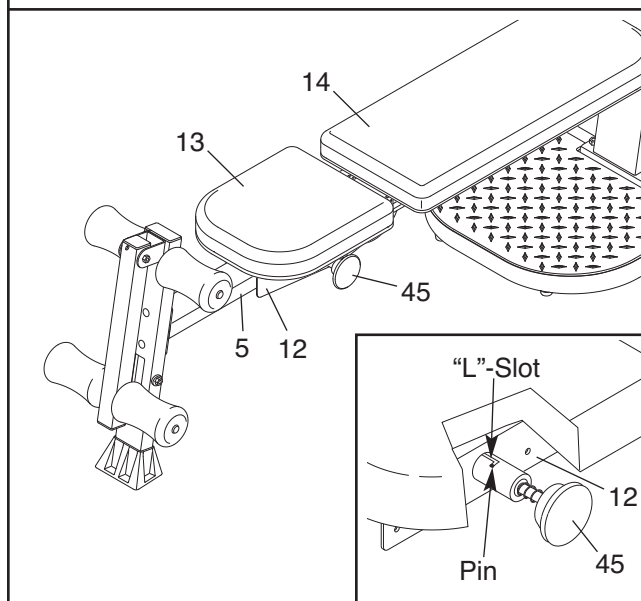

ATTACHING THE ACCESSORIES

To attach a Short Handle (49) to a high pulley, first attach the high pulley to the resistance system (see ATTACHING THE HIGH PULLEYS AND LEG LEVER on page 13). Then, attach the Short Handle to the Short Cable (33) with a Cable Clip (51).

The Long Handles (not shown) and the Ankle Strap (not shown) can be attached to the Long Cable (80) with Cable Clips (51). Attach the Leg Press Strap (not shown) to both ends of the Long Cable, or the optional lat bar to the Short Cables (33), with two Cable Clips.

Note: A lat bar is an optional accessory for the CrossBow by WEIDER™. To purchase a lat bar, call our Customer Service Department toll-free at 1-800-999-3756 and ask for model number WEMC04420.

ADJUSTING THE RESISTANCE


To add resistance, hold a “U”-channel on the 10-Pound Center Crossbow (44) firmly and push the end of a crossbow under it. Repeat with the other side. If more resistance is needed, add one crossbow at a time.

Note: When adding resistance, always start with the heaviest crossbow to be used, and finish with the lightest crossbow. When removing crossbows from the “U”-channels, start with the lightest crossbow and finish with the heaviest.

⚠ WARNING: When adding resistance, make sure that both ends of the crossbow rest under the two “U”-channels. The rings on the Removable Crossbows (36, 67) must be pushed against the Crossbow Spacer (35). Do not add or remove crossbows from the “U”-channels while the end of the Long Cable (80) is pulled out.

Note: The CrossBow by WEIDER™ uses progressive resistance. As the crossbows begin to bend, the amount of resistance will increase gradually. As the crossbows bend further, the resistance will increase rapidly.

Additional resistance can be added to the CrossBow by WEIDER™ resistance system by calling the Customer Service number on the back cover of this manual and asking for model number **WEMC06420** (100-Pound Power Pak) or **WEMC09420** (200-Pound Power Pak).

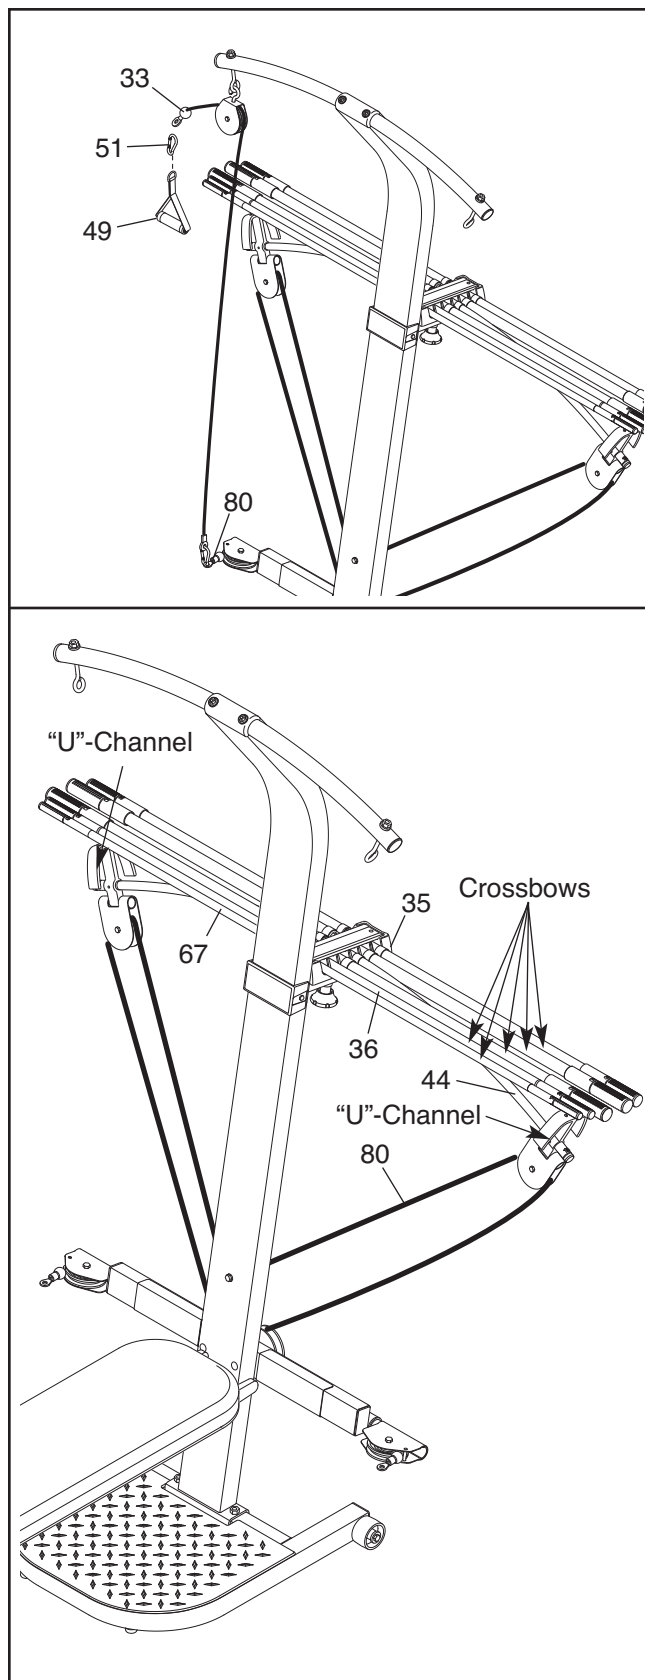


ADJUSTING THE BACKREST

The Backrest (14) can be used in a level position or any of three inclined positions. To use the Backrest in a level position, secure the Seat Carriage (12) to the adjustment hole in the Bench Rail (5) next to the Front Leg (6) (see ADJUSTING THE SEAT on page 13).

To use the Backrest (14) in an inclined position, secure the Seat Frame (12) to one of the other three adjustment holes in the Bench Rail (5). Rest the Backrest against the Upright (3).


For row exercises, remove the Backrest (14). Hold the Backrest vertically over the Seat (13) and lift the rod out of the slot in the Seat Carriage (12) (see the inset drawing).

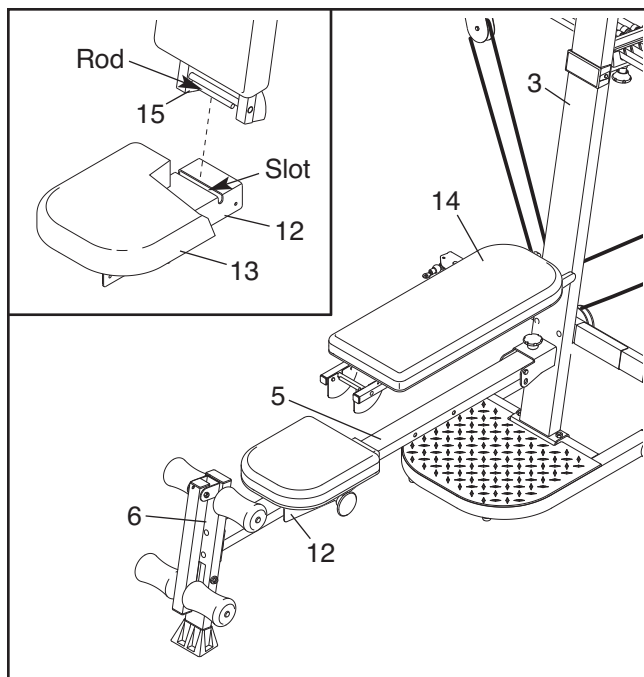

STORING THE RESISTANCE SYSTEM

To store the resistance system, slide the ends of the Leg Lever Cable (32) onto the hook on the bottom of the Bench Rail (5). Be sure the Seat (13) is in the position closest to the Front Leg (6) (see ADJUSTING THE SEAT on page 13). Next, remove the Storage Knob (30) from the Upright (3). Lift the Front Leg toward the Lat Tower Crossbar (10), and tighten the Storage Knob into the side of the Upright and the Bench Rail. Remove all of the crossbows from the “U”-channels on the 10-Pound Center Crossbow (44) (see ADJUSTING THE RESISTANCE on page 14). Finally, loosen the Fulcrum Knob (43) and pull it out as far as it will go. Turn the crossbow assembly vertically and engage the Fulcrum Knob into the fulcrum on the Lat Tower (4). **Note: Storing the crossbows vertically will prolong the life of the crossbows.**

To move the resistance system, place the toe of your shoe on the end of the Base (1) and hold the resistance system in the indicated area. Tilt the resistance system back onto the Wheels (31) and roll it to the new location. **Be careful not to let the Front Leg (6) or Leg Lever (7) pinch your hands when you tilt the system back.**

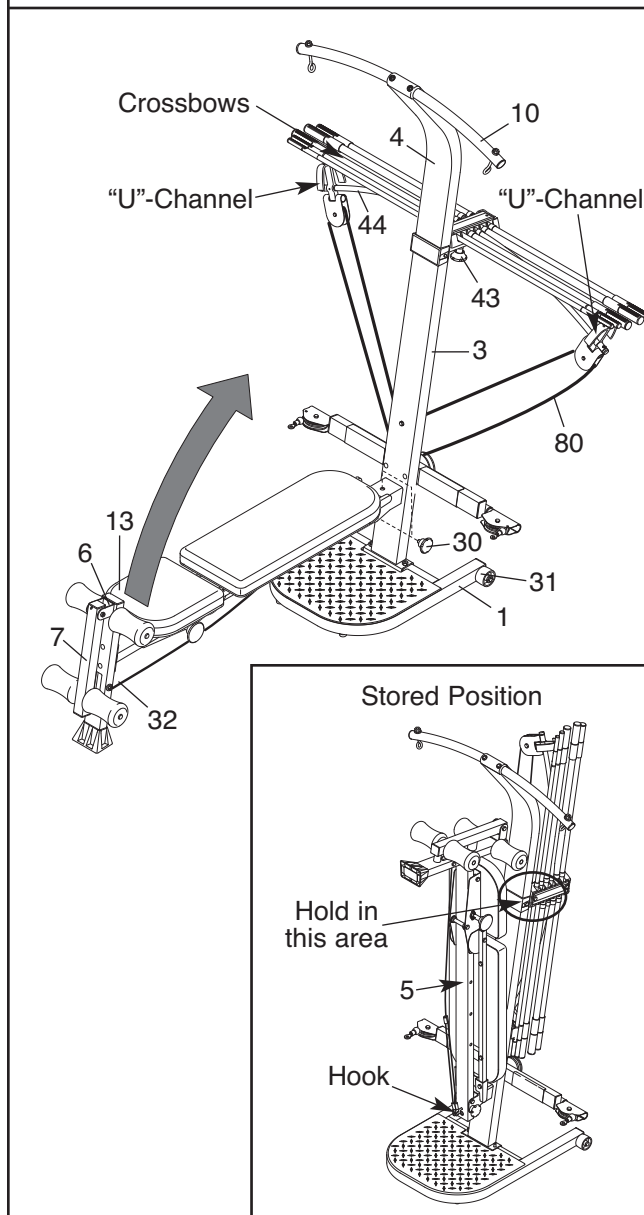


⚠ WARNING: Be sure that all of the crossbows are removed from the “U”-channels before moving the crossbow assembly to the stored position.

Make sure that the crossbow assembly is in the horizontal position and that the Storage Knob (30) is in place and fully tightened each time you use the resistance system.

USING THE REMOVABLE CROSSBOWS


The Removable Crossbows (36, 67) can be used to exercise apart from the resistance system, as shown in the video, or on the exercise guide. To remove a Crossbow, pull it out of the Crossbow Spacer (35).

To replace the Removable Crossbows (36, 67), slide them into the Crossbow Spacer (35) from the side shown, so that the arrows on the rings point toward the Spacer. **Make sure the rings are pushed against the Spacer.**

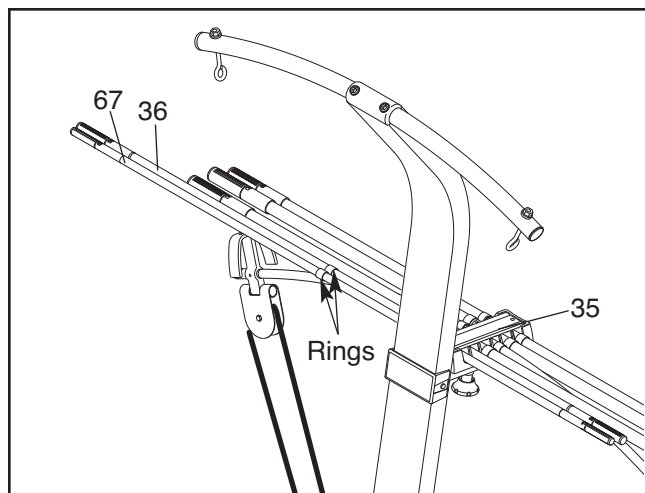

CABLE DIAGRAM

The cable diagram shows the proper routing of the Long Cable (80). Use the diagram to make sure that the cable has been assembled correctly. If the cable has not been correctly routed, the resistance system will not function properly and damage may occur. The numbers show the correct route for the cable.

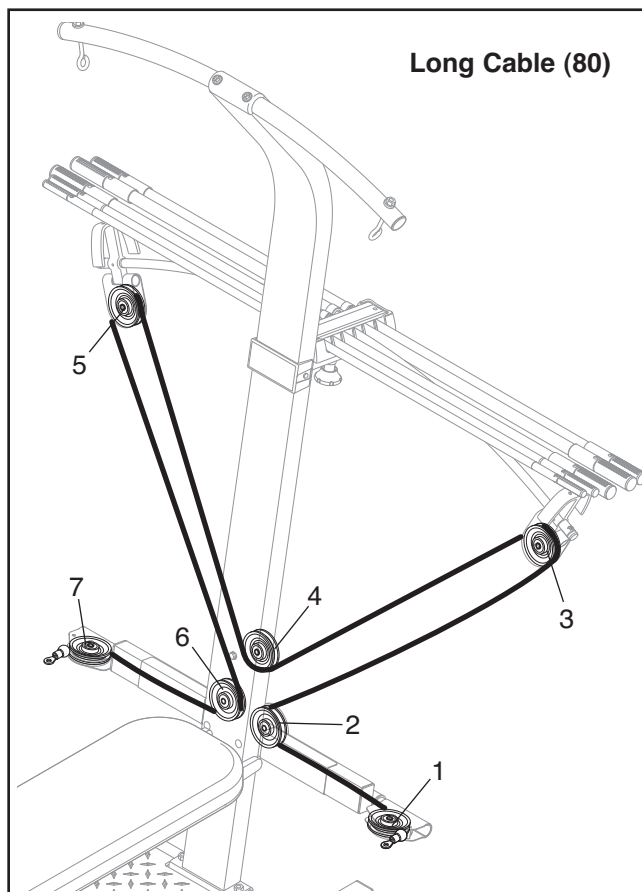

EXERCISE GUIDELINES

THE FOUR BASIC TYPES OF WORKOUTS

Muscle Building

To increase the size and strength of your muscles, push them close to their maximum capacity. Your muscles will continually adapt and grow as you progressively increase the intensity of your exercise. You can adjust the intensity level of an individual exercise in two ways:

- by changing the amount of resistance used
- by changing the number of repetitions or sets performed. (A “repetition” is one complete cycle of an exercise, such as one sit-up. A “set” is a series of repetitions.)

The proper amount of resistance for each exercise depends upon the individual user. You must gauge your limits and select the amount of resistance that is right for you. Begin with 3 sets of 8 repetitions for each exercise you perform. Rest for 3 minutes after each set. When you can complete 3 sets of 12 repetitions without difficulty, increase the amount of resistance.

Toning

You can tone your muscles by pushing them to a moderate percentage of their capacity. Select a moderate amount of resistance and increase the number of repetitions in each set. Complete as many sets of 15 to 20 repetitions as possible without discomfort. Rest for 1 minute after each set. Work your muscles by completing more sets rather than by using high amounts of resistance.

Weight Loss

To lose weight, use a low amount of resistance and increase the number of repetitions in each set. Exercise for 20 to 30 minutes, resting for a maximum of 30 seconds between sets.

Cross Training

Cross training is an efficient way to get a complete and well-balanced fitness program. An example of a balanced program is:

- Plan strength training workouts on Monday, Wednesday, and Friday.
- Plan 20 to 30 minutes of aerobic exercise, such as running on a treadmill or riding on an elliptical or exercise bike, on Tuesday and Thursday.
- Rest from both strength training and aerobic exercise for at least one full day each week to give your body time to regenerate.

The combination of strength training and aerobic exercise will reshape and strengthen your body, plus develop your heart and lungs.

PERSONALIZING YOUR EXERCISE PROGRAM

Determining the exact length of time for each workout, as well as the number of repetitions or sets completed, is an individual matter. It is important to avoid overdoing it during the first few months of your exercise program. You should progress at your own pace and be sensitive to your body's signals. If you experience pain or dizziness at any time while exercising, stop immediately and begin cooling down. Find out what is wrong before continuing. Remember that adequate rest and a proper diet are important factors in any exercise program.

WARMING UP

Begin each workout with 5 to 10 minutes of stretching and light exercise to warm up. Warming up prepares your body for more strenuous exercise by increasing circulation, raising your body temperature and delivering more oxygen to your muscles.

WORKING OUT

Each workout should include 6 to 10 different exercises. Select exercises for every major muscle group, emphasizing areas that you want to develop most. To give balance and variety to your workouts, vary the exercises from session to session.

Schedule your workouts for the time of day when your energy level is the highest. Each workout should be followed by at least one day of rest. Once you find the schedule that is right for you, stick with it.

EXERCISE FORM

Maintaining proper form is an essential part of an effective exercise program. This requires moving through the full range of motion for each exercise, and moving only the appropriate parts of the body. Exercising in an uncontrolled manner will leave you feeling exhausted. On the exercise guide accompanying this manual you will find photographs showing the correct form for several exercises, and a list of the muscles affected. Refer to the muscle chart on page 18 to find the names of the muscles.

The repetitions in each set should be performed smoothly and without pausing. The exertion stage of each repetition should last about half as long as the return stage. Proper breathing is important. Exhale during the exertion stage of each repetition and inhale during the return stroke. Never hold your breath.

Rest for a short period of time after each set. The ideal resting periods are:

- Rest for three minutes after each set for a muscle building workout.
- Rest for one minute after each set for a toning workout.
- Rest for 30 seconds after each set for a weight loss workout.

Plan to spend the first couple of weeks familiarizing yourself with the equipment and learning the proper form for each exercise.

COOLING DOWN

End each workout with 5 to 10 minutes of stretching. Include stretches for both your arms and legs. Move


slowly as you stretch and do not bounce. Ease into each stretch gradually and go only as far as you can without strain. Stretching at the end of each workout is an effective way to increase flexibility.

STAYING MOTIVATED

For motivation, keep a record of each workout. The chart on page 19 of this manual can be photocopied and used to schedule and record your workouts. List the date, the exercises performed, the resistance used, and the numbers of sets and repetitions completed. Record your weight and key body measurements at the end of every month. Remember, the key to achieving the greatest results is to make exercise a regular and enjoyable part of your everyday life.

MUSCLE CHART

- A. Sternomastoid (neck)
- B. Pectoralis Major (chest)
- C. Biceps (front of arm)
- D. Obliques (waist)
- E. Brachioradials (forearm)
- F. Hip Flexors (upper thigh)
- G. Abductor (outer thigh)
- H. Quadriceps (front of thigh)
- I. Sartorius (front of thigh)
- J. Tibialis Anterior (front of calf)
- K. Soleus (front of calf)
- L. Rectus Abdominus (stomach)
- M. Adductor (inner thigh)
- N. Trapezius (upper back)
- O. Rhomboideus (upper back)
- P. Deltoid (shoulder)
- Q. Triceps (back of arm)
- R. Latissimus Dorsi (mid back)
- S. Spinae Erectors (lower back)
- T. Gluteus Medius (hip)
- U. Gluteus Maximus (buttocks)
- V. Hamstring (back of leg)
- W. Gastrocnemius (back of calf)

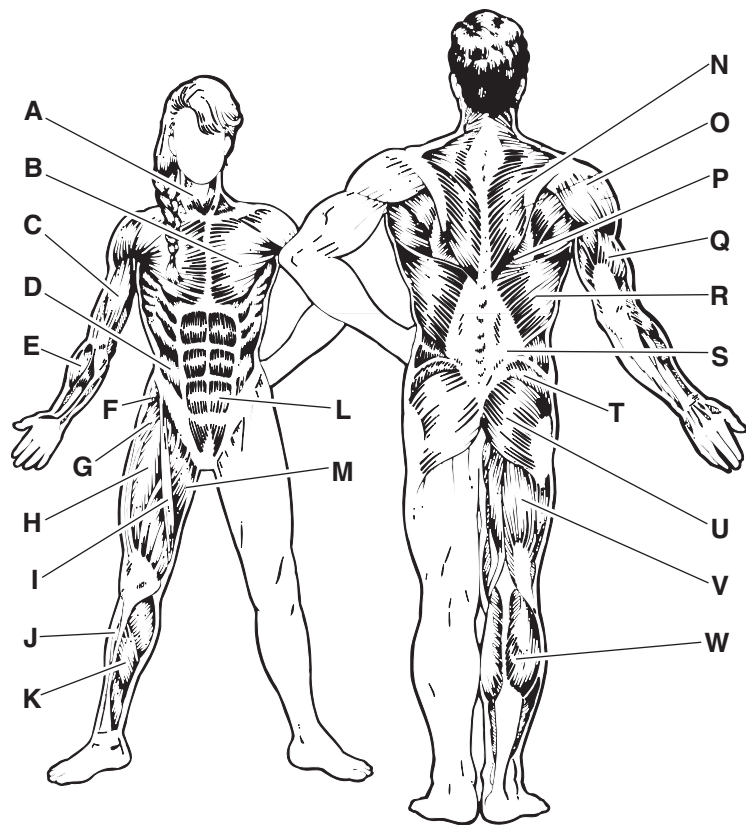

MONDAY	EXERCISE	RESISTANCE	SETS	REPS
Date: / /				

TUESDAY AEROBIC EXERCISE

Date: / /

WEDNESDAY	EXERCISE	RESISTANCE	SETS	REPS
Date: / /				

THURSDAY AEROBIC EXERCISE


Date: / /

FRIDAY	EXERCISE	RESISTANCE	SETS	REPS
Date: / /				

Make photocopies of this page for scheduling and recording your workouts.

PART IDENTIFICATION CHART

 
Refer to the drawings below to identify small parts used in assembly. The number in parentheses below each drawing is the key number of the part, from the PART LIST on the reverse side of this page. Find the quantity of each part on the PART LIST. **Note: Some small parts may have been pre-attached. If a part is not in the parts bag, check to see if it has been pre-attached.**




3/8" x 2 3/4" Button Head Bolt (64)



 
3/8" x 2 3/4" Carriage Bolt (83)




3/8" x 2 1/4" Button Head Bolt (63)

 


3/8" x 3" Button Head Bolt (70)

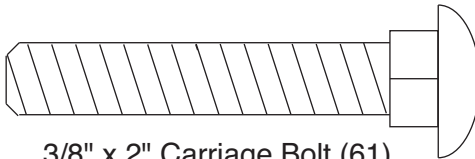


3/8" x 2" Carriage Bolt (61)

 


3/8" x 3 3/4" Bolt (90)

 


1/4" x 1 3/4" Bolt (58)

 


5/16" x 4" Bolt (60)

 


3/8" x 1 1/2" Button Head Bolt (71)

 


3/8" x 4" Bolt (66)

 


3/8" x 1" Button Head Bolt (87)

 


3/8" x 4 1/4" Bolt (81)

 

1/4" x 3/4" Bolt (82)

 


3/8" x 4 1/2" Button Head Bolt (40)

 


#8 x 3/4" Tek Screw (62)




5/16" x 4.69" All-thread Bolt (47)

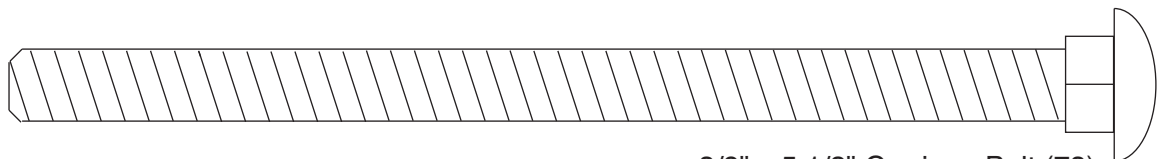


3/8" x 5 1/2" Carriage Bolt (73)

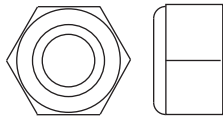


3/8" Nylon Locknut (76)

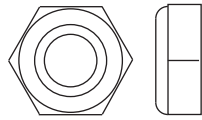


3/8" Nylon Jamnut (103)

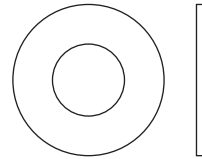


5/16" Washer (59)

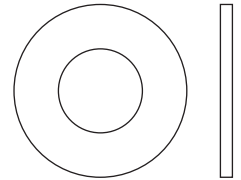


3/8" Washer (75)

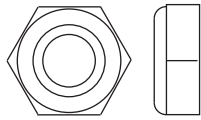


3/8" Jamnut (57)

 


5/16" Nylon Jamnut (65)

 

#8-32 x 1/2"
Machine Screw (92)

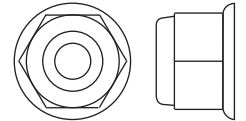


5/16" Hex Serrated
Flange Nut (19)

 


#8 x 3/8" Screw (24)




 
#8-32 Nylon Locknut (69)




#8 x 1/2" Tek Screw (56)

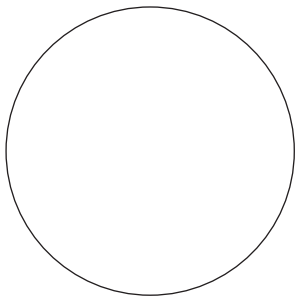


1 1/2" Round Inner Cap (38)

 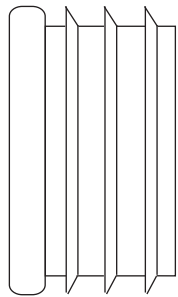


#8 x 1/2" Flat Head Screw (85)

 


3/8" x 1" Spacer (52)

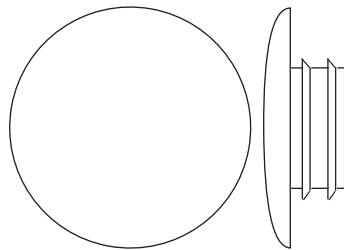


1 1/4" Round Inner Cap (78)

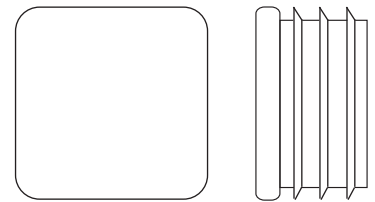



1" Square Inner Cap (54)

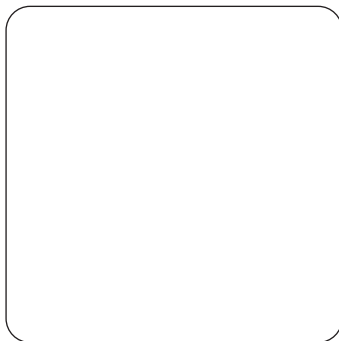


1 3/4" Square Inner Cap (42)

 


1 1/2" x 2 1/2" Inner Cap (41)

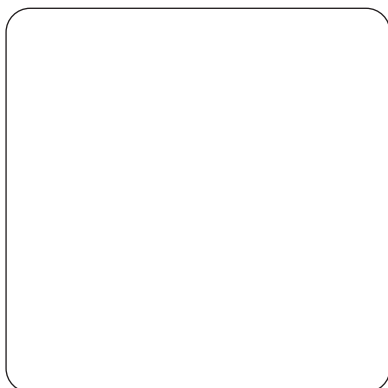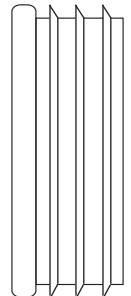

2" Square Inner Cap (98)

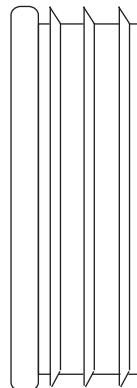

1 1/2" x 3" Inner Cap (99)

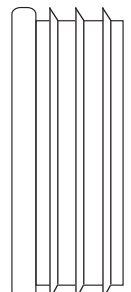


PART LIST—Model No. WESY59420

R1202B

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Base	55	1	Leg Lever Bumper
2	1	Base Plate	56	8	#8 x 1/2" Tek Screw
3	1	Upright	57	2	3/8" Jamnut
4	1	Lat Tower	58	4	1/4" x 1 3/4" Bolt
5	1	Bench Rail	59	2	5/16" Washer
6	1	Front Leg	60	2	5/16" x 4" Bolt
7	1	Leg Lever	61	2	3/8" x 2" Carriage Bolt
8	1	Backrest Backing	62	6	#8 x 3/4" Tek Screw
9	1	Seat Backing	63	1	3/8" x 2 1/4" Button Head Bolt
10	1	Lat Tower Crossbar	64	3	3/8" x 2 3/4" Button Head Bolt
11	1	Cross Tube	65	4	5/16" Nylon Jamnut
12	1	Seat Carriage	66	3	3/8" x 4" Bolt
13	1	Seat	67	1	10-Pound Removable Crossbow
14	1	Backrest	68	2	Long Handle
15	1	Backrest Frame	69	2	#8-32 Nylon Locknut
16	1	Backrest Cap	70	2	3/8" x 3" Button Head Bolt
17	2	Guard Plate	71	6	3/8" x 1 1/2" Button Head Bolt
18	1	Crossbow Fulcrum	72	1	Crossbow Cover Plate
19	2	5/16" Hex Serrated Flange Nut	73	2	3/8" x 5 1/2" Carriage Bolt
20	2	10-Pound Short Crossbow Cap	74	4	Pivot Bushing
21	2	High Pulley Housing	75	12	3/8" Washer
22	2	Swivel Arm	76	11	3/8" Nylon Locknut
23	2	Grip Tape	77	2	#8 x 1 1/2" Bolt
24	2	#8 x 3/8" Screw	78	4	1 1/4" Round Inner Cap
25	4	Arm Bushing	79	2	40-Pound Crossbow Cap
26	4	Foam Pad	80	1	Long Cable
27	1	Front Leg Foot	81	2	3/8" x 4 1/4" Bolt
28	10	90mm Pulley	82	4	1/4" x 3/4" Bolt
29	3	Pulley Guard	83	2	3/8" x 2 3/4" Carriage Bolt
30	1	Storage Knob	84	2	1/4" Washer
31	2	Wheel	85	12	#8 x 1/2" Flat Head Screw
32	1	Leg Lever Cable	86	2	5/16" x 3/4" Button Head Screw
33	2	Short Cable	87	4	3/8" x 1" Button Head Bolt
34	2	Eyebolt	88	2	20-Pound Crossbow Cap
35	1	Crossbow Spacer	89	1	Name Plate
36	1	20-Pound Removable Crossbow	90	1	3/8" x 3 3/4" Bolt
37	2	Fulcrum Bushing	91	1	Retainer Ring
38	3	1 1/2" Round Inner Cap	92	2	#8-32 x 1/2" Machine Screw
39	3	2.3" Metal Spacer	93	1	Crossbar Cover
40	1	3/8" x 4 1/2" Button Head Bolt	94	2	Pulley Housing
41	2	1 1/2" x 2 1/2" Inner Cap	95	2	80-Pound Crossbow
42	2	1 3/4" Square Inner Cap	96	1	40-Pound Crossbow
43	1	Fulcrum Knob	97	6	.34" Metal Spacer
44	1	10-Pound Center Crossbow	98	2	2" Square Inner Cap
45	1	Seat Knob	99	2	1 1/2" x 3" Inner Cap
46	6	Bearing Wheel	100	4	80-Pound Crossbow Cap
47	1	5/16" x 4.69" All-thread Bolt	101	2	10-Pound Crossbow Cap
48	1	Leg Press Strap	102	2	Large Plastic Foot
49	2	Short Handle	103	12	3/8" Nylon Jamnut
50	1	Ankle Strap	#	1	User's Manual
51	4	Cable Clip	#	1	Exercise Guide
52	2	3/8" x 1" Spacer	#	1	Exercise Decal
53	3	Plastic Foot	#	2	Allen Wrench
54	2	1" Square Inner Cap	#	1	Allen Wrench

Note: "#" indicates a non-illustrated part. Specifications are subject to change without notice. See the back cover of the user's manual for information about ordering replacement parts.

R1202B

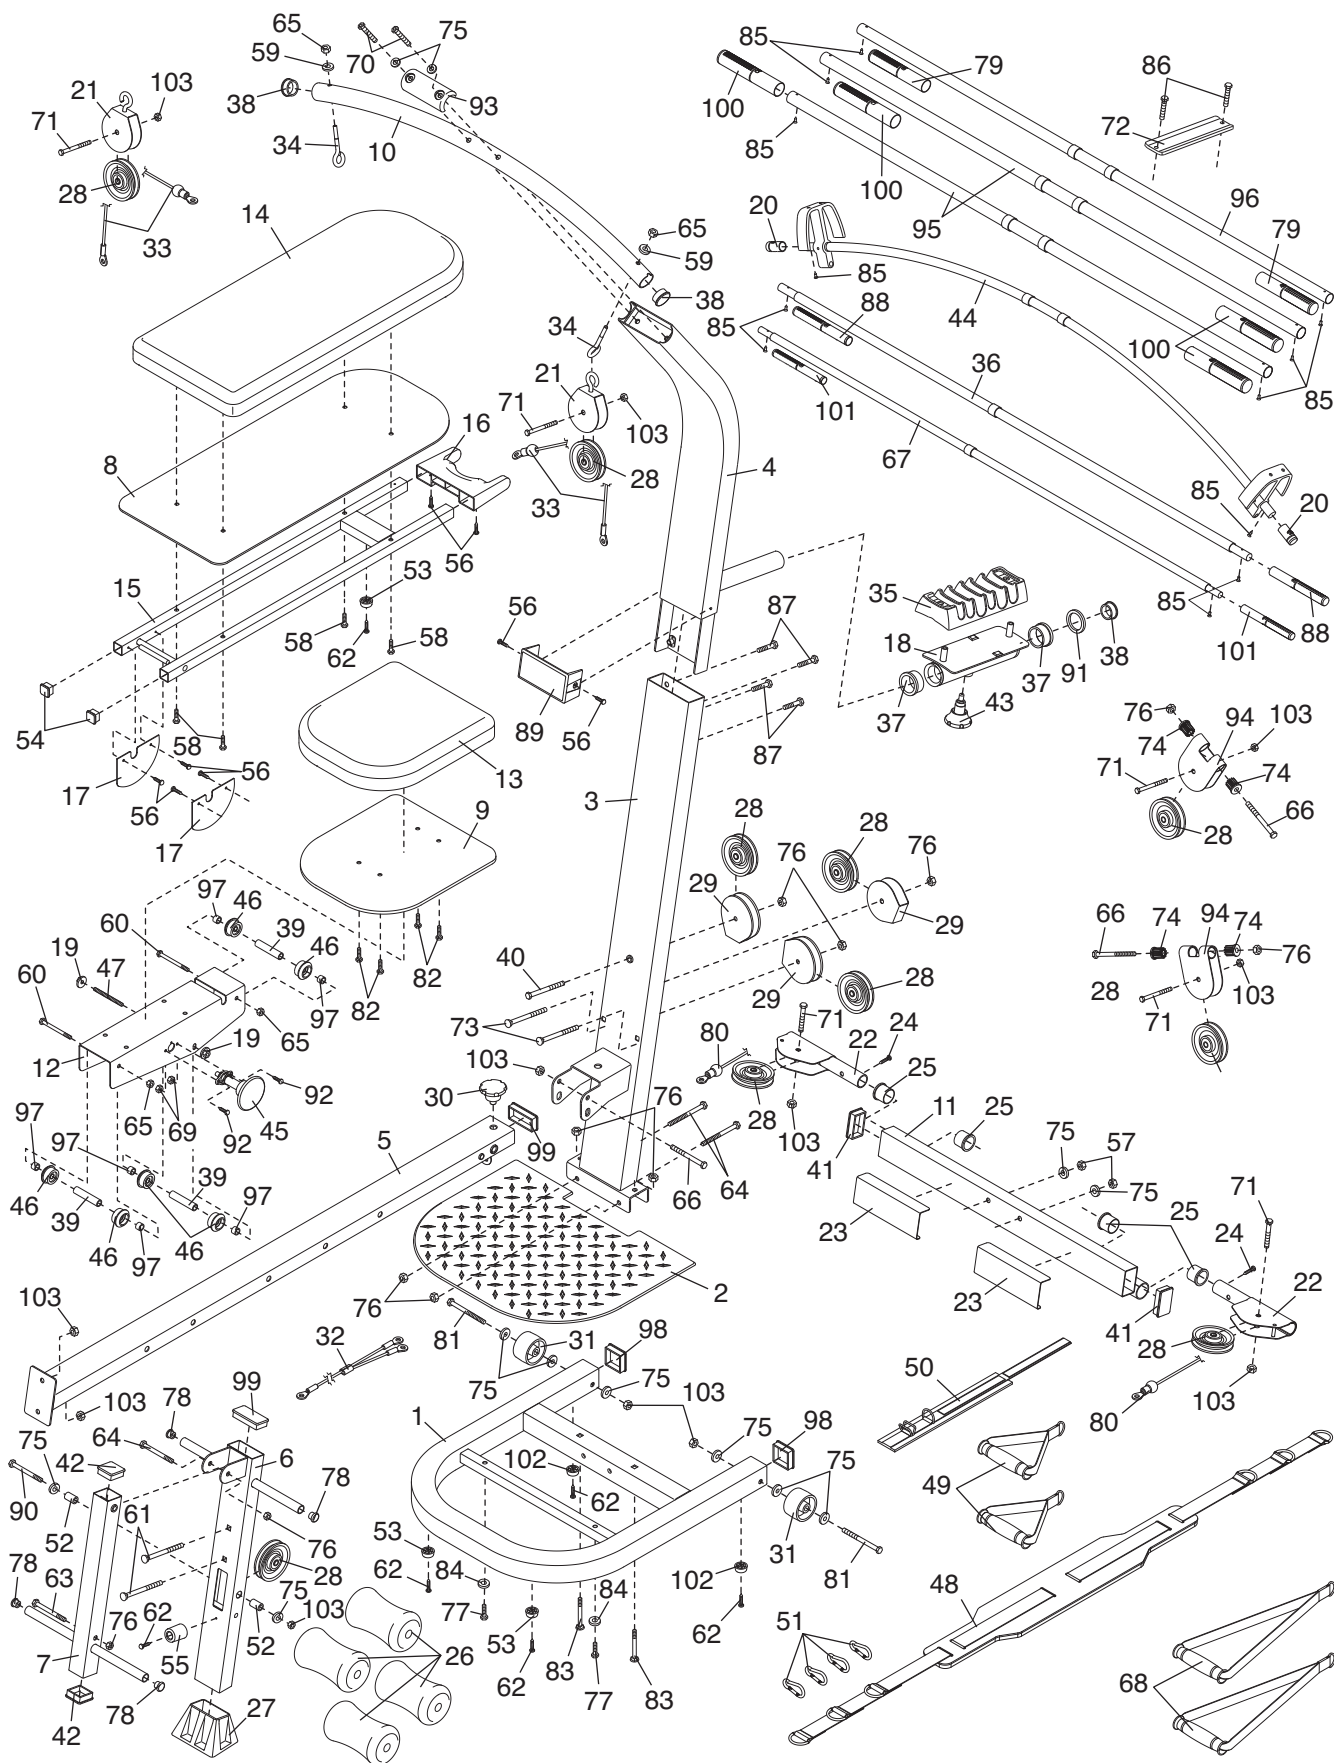

ORDERING REPLACEMENT PARTS

To order replacement parts, simply call our Customer Service Department toll-free at 1-800-999-3756, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please be prepared to give the following information:

- The MODEL NUMBER of the product (WESY59420)
- The NAME of the product (CrossBow by WEIDER™ resistance system)
- The SERIAL NUMBER of the product (see the front cover of this manual)
- The KEY NUMBER and DESCRIPTION of the part(s) (see the PART LIST and EXPLODED DRAWING in the center of this manual)

LIMITED WARRANTY

ICON Health & Fitness, Inc. (ICON), warrants this product to be free from defects in workmanship and material, under normal use and service conditions. ICON warrants the resistance crossbows for the life-time of the product, the seats and vinyl for a period of five (5) years from the date of purchase, and all other parts for five (5) years. This warranty extends only to the original purchaser. ICON's obligation under this warranty is limited to replacing or repairing, at ICON's option, the product through one of its authorized service centers. All repairs for which warranty claims are made must be pre-authorized by ICON. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by an ICON authorized service center; products used for commercial or rental purposes; or products used as store display models. No other warranty beyond that specifically set forth above is authorized by ICON.

ICON is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal or installation or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

ICON HEALTH & FITNESS, INC., 1500 S. 1000 W., LOGAN, UT 84321-9813